


Standard Pumps

Logic PCBA Installation

To install the Logic PCBA, first locate the four stand-offs mounted on the AP driver PCBA (if there are not stand-offs on the AP panel, install the ones provided).

Align the Logic PCBA over the four stand-offs and press down to seat the 20 position connectors. Insert the four screws provided through the board to the stand-offs and tighten.

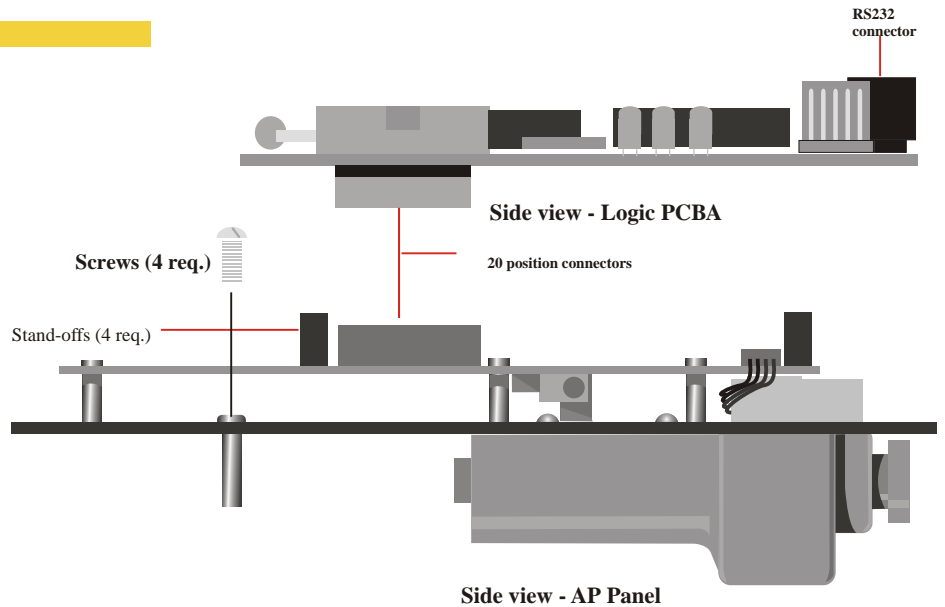


Regulator PCBA Installation


If applicable, remove the four screws from your Logic PCBA, and replace with the four stand-offs provided.

Align the holes of the Regulator PCBA with the holes of the stand-offs. Press down so that the 20 position connector on the bottom is seated on the 20 position connector of the Logic PCBA. Install the four screws into the stand-offs, then tighten.

Top view - Regulator PCBA

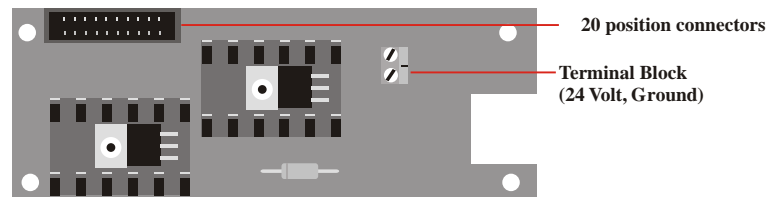

Side view - Logic PCBA

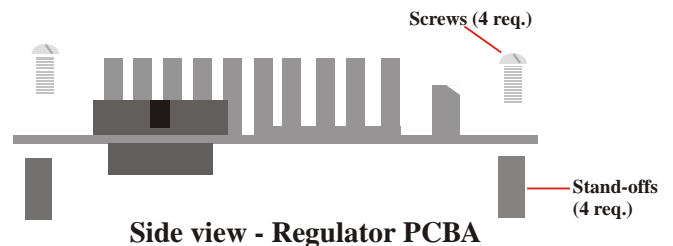

Side view - Regulator PCBA